



Mintaka ^{Duo}

Dual-Sensor Precision Barograph

User's Guide



Mintaka Duo User's Guide


v3.0

This *User's Guide* does not create any legally binding obligations for Mintaka Instruments, LLC towards the customer or end user. All legally binding commitments and agreements are included exclusively in the appropriate supply contract or Conditions of Sale.

The Mintaka Duo is distributed by Weems and Plath in Annapolis, MD. (410) 263-6700, www.weems-plath.com

For updates, tech support and related information,
see mintakainstruments.com
which includes a link to register your unit online.

Quick Start Guide


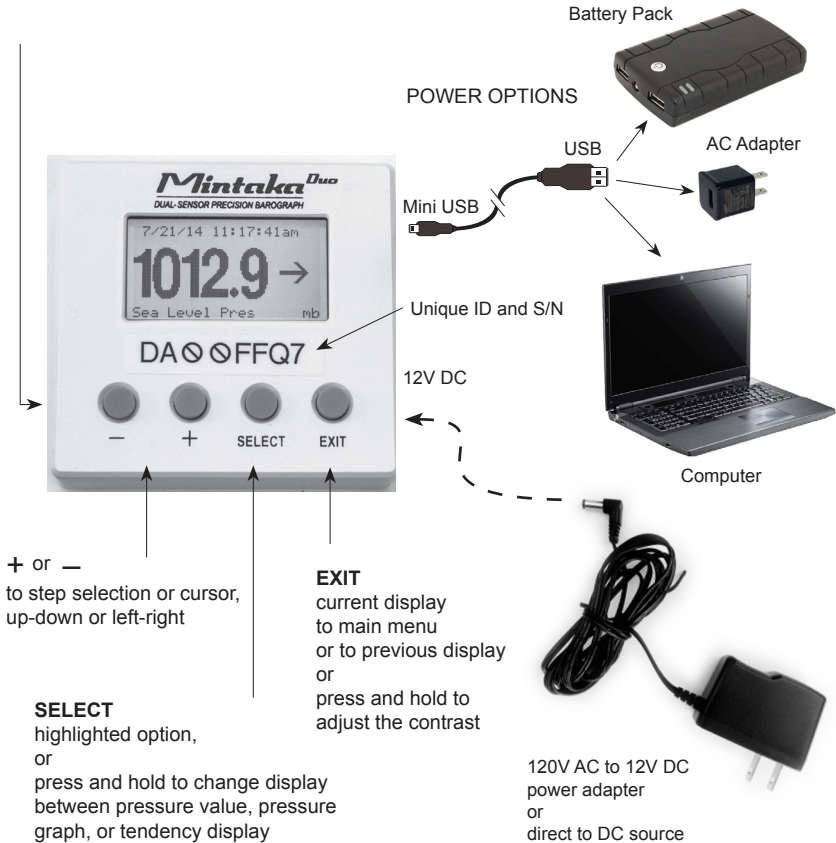


Included in the box: Barograph, 120V AC to 12V DC power adapter, USB cable, *User's Manual*, and Velcro mounting patch.

Shortcut Display Options

Once powered on, all functions and displays can be reached from the screen menus explained in this *User's Guide*, with full menu maps in Appendix A4 at the back of the book. These single-button shortcuts below are also available.

Press and hold [SELECT] to toggle through these main screens.

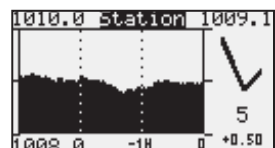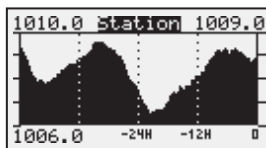

Contents

Quick Start Guide	3
Shortcut Display Options.....	3
INTRODUCTION	6
Product Description and Options	6
Quick Start Instructions.....	6
Terminology and Applications	6
How to Use this <i>User's Guide</i>	7
Instrument Power	8
Contrast Control	8
Mounting	8
Use of the Control Buttons	9
EXIT Button	9
[+] and [-] Buttons	10
SELECT Button.....	10
1. MENU — SHOW VALUES.....	10
1.1 Show Values / Pressure.....	10
Pressure Trend Arrows	11
1.2 Show Values / Clock.....	13
1.3 Show Values / History	14
How Data are Accumulated and Displayed	15
2. MENU — SHOW GRAPH	16
2.1 Show Graph / Graph Pressure.....	16
Shortcut Graph Display	17
Average Pressure Display.....	18
Samples of Barograph Traces	19
2.2 Show Graph / Graph Tendency	19
2.3 Show Graph / Tendency Code	20
3. MENU — LOG PRESSURE.....	21
Pressure Tendency Characteristic Codes	22
3.1 Log Pressure / Log Now	23
3.2 Log Pressure / View Entries.....	23
3.3 Log Pressure / Clear Entries.....	23

4. MENU — SET-UP	24
4.1 Set-up / Units, Time Zone	24
4.2 Set-up / Sea Level Pressure (SLP)	24
Set Sea Level Pressure by Elevation	25
Set Sea Level Pressure by Pressure Value	26
To Change from SLP back to Station Pressure	26
4.3 Set-up / Station Pressure Adj.....	26
4.4 Set-up / System.....	27
Set-up / System / Time.....	27
Set-up / System / Reset	28
Reset Pressure History	28
Reset to Factory Settings	29
5. OPERATIONS	29
5.1 Displays Following Power Interruption.....	29
5.2 Connecting to the Duo from a Computer.....	30
5.3 Maintenance	36
5.4 Limited Warranty.....	37
5.5 FCC and CE Compliance	37
5.6 Specifications Summary.....	37
APPENDIX.....	37
A1. Air Temperature Corrections to Sea Level Pressure	38
A2. Barometer Corrections for Elevation and Temperature	40
A3. Sources of Accurate Sea Level Pressure	41
A4. Menu Map.....	42

INTRODUCTION

Product Description and Options

The Mintaka Duo (“Duo”) is an electronic barograph that measures atmospheric pressure using two independent, high-precision sensors. The measured pressure can be presented digitally or as a graphic plot of historical values displayed over time ranges of the past 30 minutes on up to the past 120 days. Numerous convenient display options are included to meet special needs of marine navigation, engineering, medicine, and science.

The standard package includes the Duo barograph, a 120V AC to 12V DC power adapter, piece of fastener tape, and this *User’s Guide*. Options include:

- An optional international multi-blade power adapter is available.
- An optional 6-ft cable with a matching DC barrel plug connector is available for direct wiring to a 12V DC power source.

Quick Start Instructions

Plug the power adapter into an appropriate (US or International) AC outlet, and connect to the barrel plug on the right side of the Duo. After powering on the instrument *for the first time*, you will see the screen below asking you to set the time zone. Use [+] or [-] keys to set it, [SELECT] to accept your choice, then a final [SELECT] to store the value. The pressure in mb will then be displayed. If the unit had been powered on earlier, this will not show; units and time zone are discussed in Sec. 4.1



Shortcut display options are shown on page 3. A full map of the menus is in Appendix A4 at the back of this Guide. Specific instructions for each of the many features and options of the device are described in this *User’s Guide*. Pressure trend arrows will not appear until the unit has been running for at least one hour.

Terminology and Applications

Although other terms are often used, only two values of atmospheric pressure matter for most applications, *station pressure* and *sea level pressure*.

Station pressure is the value of the atmospheric pressure at the location and elevation of the instrument. It is the weight of the atmosphere (per unit area) from the instrument’s elevation on up to the top of the atmosphere.

Sea level pressure, on the other hand, is a computed value of the pressure that is intended to represent what your instrument would read at this moment if it could (hypothetically) be lowered to sea level at your location. When inland at an elevation of 300 ft above sea level, it would be the pressure your instrument would read if you

lowered it into a hole that was 300 ft deep. As you lower it down, there is more and more atmosphere above it, so the weight of the air above it and the corresponding pressure increases as it lowers. Sea level pressure is always higher than station pressure—unless your barometer happened to be located below mean sea level, which is possible at ground level at a few locations, and often the case in mining applications.

Depending on your application, you will want to display either sea level pressure or station pressure. Sea level pressure is commonly abbreviated SLP. Accurate sources of SLP online are in Appendix A3.

If your main interest in atmospheric pressure is related to weather, then you will most likely want to display sea level pressure (SLP), regardless of the location or elevation of your Duo. Essentially all broadcast or published weather reports are given in terms of SLP, and all weather maps identify the isobars of constant pressure in terms of SLP. Furthermore, if you are reporting your weather observations to another agency or broadcast station, they will expect your reported pressure to be SLP.

Thus if your application is weather related, you will want to use the Set-up option to adjust the instrument to show SLP. You can make this adjustment one of two ways, either from a known value of SLP at the time, or from a known elevation of the instrument. The step by step procedure is explained in this *User's Guide*.

It does not matter if you are in a boat with the instrument at 6 ft above sea level or in Sante Fe, NM at 7,000 ft above sea level. The procedure is the same for adjusting the instrument to display SLP.

Other applications of accurate atmospheric pressure do not care at all about SLP. They care only about the actual pressure right at the location of the instrument, which is the station pressure. If you are, for example, tuning an engine, or calibrating a medical instrument in a hospital, or setting controls on a sensitive air conditioner, or documenting life raft leak rates, or setting controls on a regional power station, it is the actual value of the pressure at the test site that matters. The weather causing it and changes introduced by instrument elevation above sea level do not matter.

Station pressure applications require no special settings. If you have reason to change the internal calibration factor for the sensors, you can make an adjustment that will change the station pressure reading. All instruments that read barometric pressure, either mechanical (aneroid) devices or electronic devices in any price range, will eventually drift off of their initial calibration to some extent. For the most precise work, it is recommended by the World Meteorological Organization (WMO) and the National Weather Service (NWS) to check the calibration at least once a year. Accuracy, drift, and calibration options are discussed later in the *User's Guide*.

How to Use this User's Guide

It is recommended that you skim through the full *User's Guide* before using the instrument. Then for details on a specific function, find that function in the list of MENUs in the Table of Contents (page 4.). This will direct you to the pages that cover the topic. An inserted cross-reference such as (Sec. 2.4) means the topic at hand is further discussed in Section 2.4. A full map of the menus is in Appendix A4.

Instrument Power

The Duo requires an external source of power. There are no internal batteries other than a long term (> 10 years) cell that maintains the precision clock timer. The instrument can be powered by any 12V DC source via the barrel plug connector on the right side.

When the Duo is connected to a computer, the power is supplied by the computer through the USB cable. This 5V DC power source via USB connector is the same used by many cellphone chargers and other electronic devices. A standard USB to mini-B USB cable is required for this connection.

Alternatively, you can plug the USB cable into any standard 5V USB power source for portable operation. 12V DC operation can be achieved with a cigarette-lighter style USB adapter or an optional barrel plug power cable can be used to hardwire the device into a vessel or vehicle's DC power system.

A portable USB power pack can be used for mobile applications. The average current used is about 63 mA at 5V. The average current used depends on how frequently the back lighting is being used. At 12V the average current is about 38 mA. See Sec. 5.6 for detailed specifications. To preserve the lifetime of the display screen, and to facilitate mobile applications, the screen light shuts off after 1 minute past the last button push. The light comes back on automatically with the touch of any button.


There are numerous USB battery pack options available on the market with various storage capacities. These are very compact units that also serve as backup power for cell phones and other devices. A unit with 6,000 mA-hr capacity will run the Duo in a portable mode continuously for about 4 days. Disconnecting the power when not in use would extend this greatly. In a portable mode the Duo can be used for pressure measurements away from other power options. Portable operation can be used for accurate elevation measurements on land.

Contrast Control

If after changing power sources, or for any reason, you wish to adjust the display contrast this can be done by pressing and holding the [EXIT] button to access the Set Contrast screen, then use [+] or [-] to adjust, then use [EXIT] to highlight OK, and press [SELECT]. To exit without changing control, highlight Cancel, and press [SELECT]. You can also access Set Contrast from the main menu: [EXIT] / Set-up / System / Contrast.

Mounting

You can mount the Duo on the wall or bulkhead using a piece of Velcro® or Dual Lock® removable fastener tapes. Removable fasteners have been used for mounting similar devices on vessels at sea for many years.

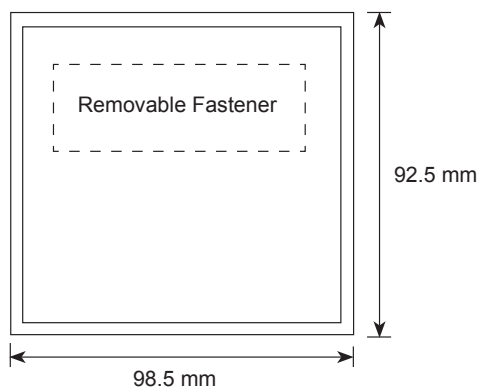

Wall or bulkhead mounting by fastener tape.

Use of the Control Buttons

Duo functions are selected from the screen menus of options with the aid of four control Buttons: [-], [+], [SELECT], and [EXIT]. In this *User's Guide* we use the notation [±] to mean either [+] or [-] as needed.

EXIT Button

The [EXIT] button exits from the present screen or menu option. From a data screen, it exits to a menu screen, and from a menu screen it exits to a data screen. If you want to interact with the device, the [EXIT] button is the first button to push. If you enter a menu and decide you do not want to change anything, press [EXIT] again to return to the data.

On menu screens with multiple input options, you can also use [EXIT] to exit that option and go to the next without changing anything. These screens include specific OK or Cancel options so you can double check all settings before accepting or exiting that menu.

[+] and [-] Buttons

The [\pm] buttons are used to move a highlighted selection up and down a vertical menu, to raise or lower a numerical value, or to move a cursor to the right or left when viewing a graph.


Use of the [+] and [-] Buttons			
	Menu	Numbers	Cursor
[+]	Up	Increase	Right
[-]	Down	Decrease	Left

SELECT Button

The [SELECT] button is used to accept choices displayed on a highlighted section of a menu page, either before or after you change them with the [\pm] buttons. Pressing the [SELECT] button then either activates the choice you have made or it moves you to the next choice that must be made on that menu screen. Menus with multiple options will then have a Cancel or OK option. Highlight your choice, and press [Select] to execute your selections. The [EXIT] button can be used to move from option to option without making any selection.


1. MENU — SHOW VALUES

1.1 Show Values / Pressure

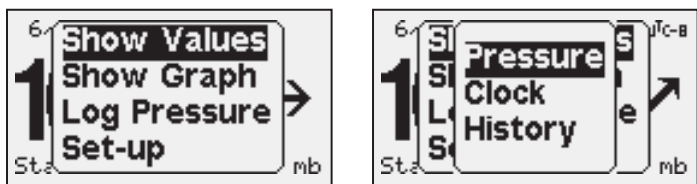

Main Menu / Show Values / Pressure

This leads to the default display, which shows the date, time, pressure, along with the pressure units and mode of the pressure display (station pressure or sea level pressure, SLP).

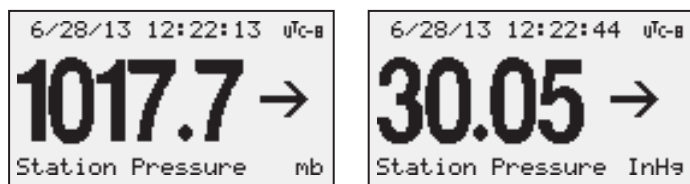

Show Values / Pressure (mb and inches)

The pressure values can be displayed in several different units, which can be changed at any time without affecting the recorded pressure history. The default units are millibars, which are the same as hectoPascals. See Sec. 4.1 on setting units. Arrows indicating recent pressure trends are also shown, starting after one full hour of operation. The time and date are displayed using and showing the time zone entered in the Set-up menu. **UTC** means universal coordinated time. The unit can also be set to display Sea Level Pressure (Sec. 4.2).

Pressure Trend Arrows

After one hour of operation, the arrows shown to the right of the pressure value is a graphic indicator of how the pressure is changing to provide a quick visual notice of significant changes. The definitions used to determine which arrows are displayed are consistent with those used by the World Meteorological Organization (WMO). The numerical value of the change over the past 3 hr is called the *Pressure Tendency*. After a full 3 hours of operation, the tendency values are stored with each recorded pressure. The numerical values can be plotted as a graph or shown in a digital list of the data in the Show Values / History option.

The pressure trend arrows, however, indicate the rate of change on a more timely basis. After 1 hour of operation, the anticipated 3-hr change will be indicated by these arrows, and this value will then be updated every 15 seconds. Thus these arrows are a quick visual description of the rate of pressure change, which can be checked more specifically by referring to the graph display or the official pressure tendency display, which is calculated strictly on the difference between present pressure and the pressure 3 hours earlier.

There are various factors that can cause the pressure to change with time, especially on a moving vessel, but a good rule of thumb is any pressure changing Fast can be a valuable sign of a pending change in the weather. Often by the time the change is Very Fast, the weather has already notably changed.












Table 1.1 Pressure Trend Arrows		
Symbol	Description	Anticipated 3-hr Pressure Change based on previous 1-hr history
	Stationary	< 1 mb < 0.03 inHg
	Rising	1 - 2 mb 0.03 - 0.06 inHg
	Rising Fast	2 - 3 mb 0.06 - 0.09 inHg
	Rising Very Fast	> 3 mb > 0.09 inHg
	Falling	1 - 2 mb 0.03 - 0.06 inHg
	Falling Fast	2 - 3 mb 0.06 - 0.09 inHg
	Falling Very Fast	> 3 mb > 0.09 inHg

Table 1.2 Weather Warnings	
	TAKE NOTICE
	WARNING
	PRESENT OR IMMINENT CHANGE

Broadly speaking, Falling (diagonal arrow) is a Take Notice signal; Falling Fast (one vertical arrow) is the important Alert or Early Warning signal; and Falling Very Fast (two vertical arrows) could well be already accompanied by bad weather, or if not, it should be considered an Imminent Warning of potentially severe weather.

As further description of pressure changes used in numerical weather prediction, the NWS and WMO also define a *Pressure Tendency Characteristic Code* that describes the 3-hour pressure change (ie decreasing then steady is Code 6). These characteristics, usually read from a barograph trace, are submitted with all official observations. They are then shown in station model reports on weather maps. To assist observers with the often tedious task of evaluating this code, the Duo offers the unique function of computing these codes automatically, as explained in Sec. 2.3.


1.2 Show Values / Clock

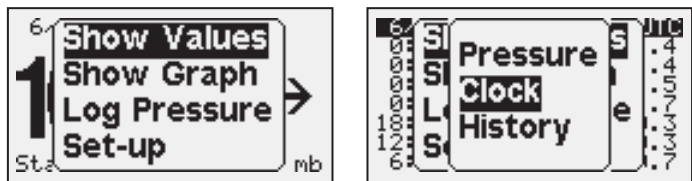

Main Menu / Show Values / Clock

The Duo includes a high precision clock that can be used for timekeeping as well as recording pressure histories. The time and date can be set if needed in the in the Set-up / System / Time menu (Sec. 4.4). The time zone is set in the Set-up / Units, Time Zone menu. The default time zone is 0, corresponding to Universal Time (GMT).


The time of an event can be recorded in the Log Pressure / Log Now option explained in Sec. 3.1. This records the pressure and the time, but it could be used to document the time of any event, even if the pressure were not of interest at that time. This has numerous applications in marine navigation.

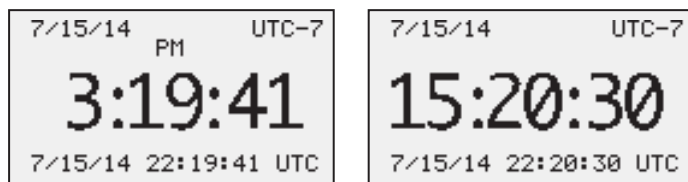

Show Values / Clock

Since weather reports and maps are mostly presented in terms of UTC (GMT) the Duo displays the current value of UTC on the clock display, regardless of your primary time zone. This also makes the clock display a valuable addition to the nav station or wheelhouse of vessels at sea. The clock has its own long-term battery, so it will keep accurate time, even if the power to the barometer is removed.

1.3 Show Values / History

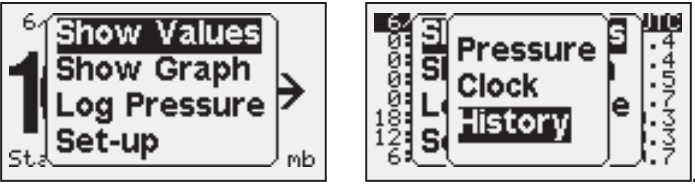

Main Menu / Show Values / History


Stored pressure data can be displayed graphically or in tabular format. Show Values / History presents a tabular list of times, pressures, and tendencies that shows all pressures stored.

7/7/17 6h UTC-7			
5:00:00	1011.0	1.0	
23:00:00	1008.8	-1.9	
17:00:00	1011.4	0.5	
11:00:00	1011.6	-1.0	
5:00:00	1014.8	0.5	
23:00:00	1013.2	-1.6	
17:00:00	1014.8	0.2	

7/7/17 6h UTC-7			
5:00:00	29.85	-0.03	
23:00:00	29.79	-0.06	
17:00:00	29.87	-0.01	
11:00:00	29.87	-0.05	
5:00:00	29.97	-0.01	
23:00:00	29.92	-0.05	
17:00:00	29.97	0.01	

Show Values / History in 6-hr steps (mb and inches)

This is a sample of the pressures stored at 6-hr intervals. Use the \pm buttons to page through the list. The numbers on the right are the tendencies at these times. Use the [SELECT] to change the time steps in this display. Press [SELECT] to see the following window:

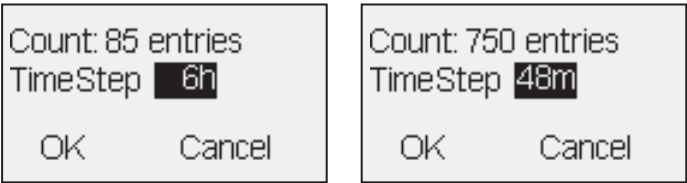

Changing History step size

Now use the \pm buttons to change the time step, then press [SELECT] to see the new list. The number of entries stored is also shown. This sample must have been running for just 510 hr (6 x 85), as the file can hold 750 data points. Two presses of the [-] key brings up the option to view the data in 48-min steps. In this case the 48-min file is full at 750 entries. Once full, new ones are added at the beginning as old ones are removed at the end.

The Duo stores past pressures in 11 data files according to the time steps shown in Table 1.3.

Table 1.3 Barograph and History Display Options

<i>Data File ID</i>	<i>Time range in graph display</i>	<i>Screen divisions in graph display</i>	<i>Time Step (= update interval)</i>
0	30 min	5 min	15 sec
1	3 hr	1 hr	90 sec
2	6 hr	1 hr	3 min
3	12 hr	2 hr	6 min
4	24 hr	6 hr	12 min
5	2 days	12 hr	24 min
6	4 days	24 hr	48 min
7	12 days	2 days	2 hr
8	30 days	5 days	6 hr
9	60 days	10 days	12 hr
10	120 days	20 days	24 hr

There are 750 values stored in each data file. They can all be viewed in tabular format from the History display. The data field is selected from the History display. There is an additional tabular history display in 1-hr steps. All stored data can be exported to a spreadsheet with a computer connection, as explained in Sec. 5.2. These data can also be viewed as a barograph trace over the same time intervals. The graphic display shows the past 120 points in each category. In the barograph mode, individual pressures can be read digitally using the cursor read out (Sec 2.1).

How Data are Accumulated and Displayed

The Duo reads the pressure once a second in each sensor and then averages 10 consecutive samples and displays that average value on the screen every second. Thus the pressure seen on the screen updating each second is the average of 20 pressure readings, one from each sensor, over the past 10 seconds. If for any reason it might be desired, either of the sensors can be shut off to read the results of just one of them. See Sec. 5.2.

Every 15 seconds, the value displayed on the screen is stored in the 30-min file (see Table 1.3), and every 90 seconds the displayed value is stored in the 3-hr file. Likewise, every 3 min an entry is stored in the 6-hr file, and so on. Thus in reviewing the history you see the values measured at the precise times stored with each data point. That is, each point stored in a table is an average over just 10 seconds, not an average over the time step of the file.

The data values at the synoptic times used in weather analysis are also automatically stored in a separate file for quick reference (Sec. 3).


The numerical value of the *pressure tendency* is a WMO/NWS official parameter defined as the change in pressure over the past three hours.

Pressure tendency = Pressure now - Pressure exactly three hours earlier.

A positive tendency means the pressure has increased over this period; a minus tendency means it has decreased. Consequently, tendency values are not presented until the instrument has been running for at least three hours.


2. MENU — SHOW GRAPH

2.1 Show Graph / Graph Pressure

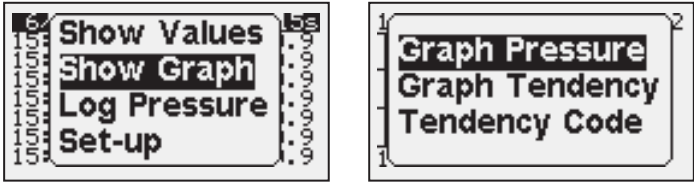

Main Menu / Show Graph / Graph Pressure

The first graph range seen will be the last one that was viewed. To change the full range displayed, use the $[\pm]$ buttons to step through the options listed in Table 1. 3.

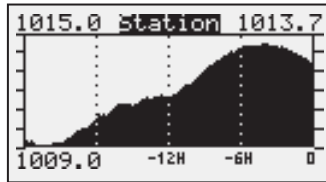

Barograph trace for the past 24 hours. It updates every 12 min. Optional displays are listed in Table 1.3. Samples are shown at the end of this section. The top right shows the present pressure, which updates every second.


The vertical scale of each barograph display is computed automatically to span the display and shown on the left. In this example, the top of the display is 1015 mb and the bottom is 1009 mb and each horizontal division is 1 mb. The size of the horizontal divisions changes to match the vertical scale.

The present pressure was 1013.7 mb, shown at the top right. This display of present pressure will update once a second. The vertical index lines mark 6-hr intervals in this display; the two that are not labeled on the left are extensions of what is seen on the right, namely -18H and -24H. Each graph requires this projection to identify the last two lines, as seen in the sample screens at the end of this section.

The Station label at the top is a reminder that you are viewing Station Pressure. If the instrument had been set to sea level pressure that label would read SLP as a reminder.

The digital display of the pressure value shown at the time of the reading (1013.7) and the history plot are updated according to the time per pixel step in the display according to Table 1.3.

To read digital values from the graph, you can use a shortcut of pressing and holding either the [+] or [-] button. This will display a digital readout window on top of the graph along with a vertical cursor line (close-spaced dots). The [-] button starts the cursor on the right of the screen; the [+] button starts it on the left.

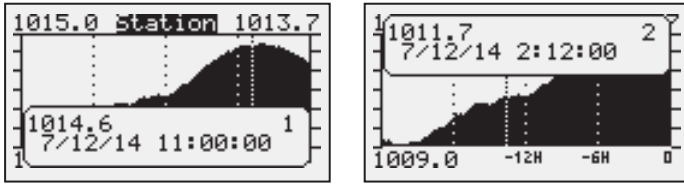

Pressure reading at the cursor position. The readout shifts position as you move the cursor to keep the trace in view.


The readout shown corresponds to the value at the cursor line. Once the cursor is showing the [±] buttons move the cursor in either direction. The single digit in the top right (1 at 1100 and 2 at 0212) is the Pressure Tendency Characteristic Code value, explained in Sec. 2.3. It varies between 1 and 8.

Press the [EXIT] to close the readout display.

Shortcut Graph Display

When viewing the digital value of the pressure (Show Value / Pressure), you can press and hold [SELECT] to directly display the Graph screen. A second press and hold shows the tendency display screen, and a third press and hold brings you back to the digital pressure.

An alternative way to set the graphic display scale—as opposed to just Show Graph and using [±] buttons—is to Show Graph and then press [SELECT] once (without holding). This opens a new options screen.

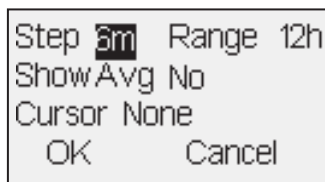

Graph Options Menu from Select when viewing a graph.

Use [±] to choose the desired range and press [SELECT]. The full range of the graph is shown in the top right of the display. This will change as you change the step to show the corresponding range.


The next step asks to show the 24-hr average or not. For most applications you would choose “No.” The 24-hr average display is most important in the tropics where there is a large semi-diurnal variation in the pressure, discussed below.

The last step is to choose to turn on the digital readout starting with cursor on the Left or Right or None. The default (None) leaves it off; you can always turn it on from the graph by holding down a [±] button.

A sample sequence of history displays is shown at the end of this section.



Average Pressure Display

A unique feature of the Duo is the ability to show a running 12-hour average of the pressure. This is of special value at low latitudes where the pressure typically oscillates on a fairly consistent pattern. This semi-diurnal variation is superimposed on all barograph traces in the tropics.

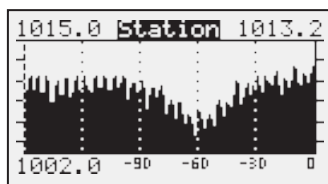


Barograph trace of Hurricane Sandy, viewed from a vessel off the coast of Panama, using an early version of the Mintaka Duo. The semi-diurnal pattern is clearly visible on top of the main ambient pressure change. See expanded views below.

Below is a sample of a diurnal pattern with the pressure average line overlaid on the graph.

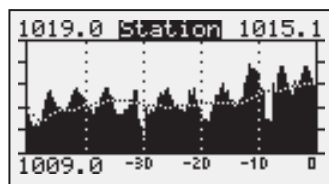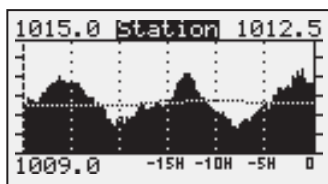


Dotted line is the 12-hr running average over 30 hr (left) and 5 days (right)

As with normal display, the \pm button turns on the digital readout with active cursor control, but when in this mode you see both the pressure at the average value at the cursor along with the actual pressure at that time.

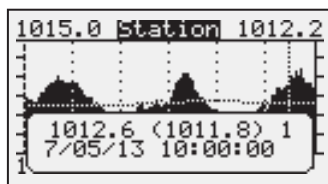


Cursor readout with 12-hr average turned on. The value in parenthesis is the average value at the time of the cursor position.


Samples of Barograph Traces

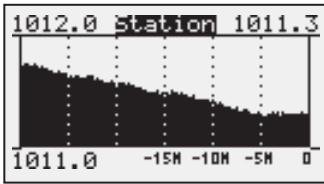


Past 30 minutes

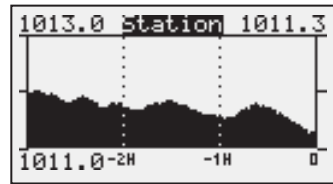


Past 3 hours

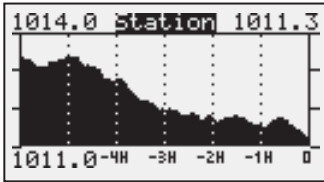


Past 6 hours

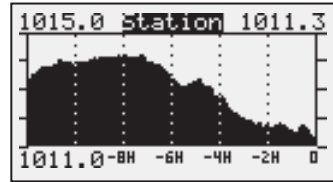


Past 12 hours

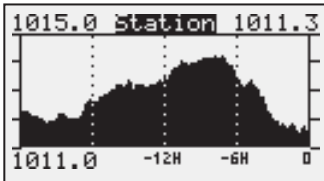

Past 24 hours

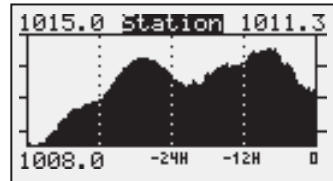



Past 2 days

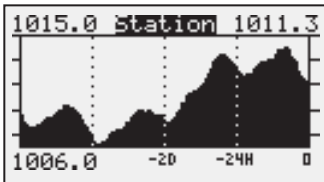

Past 4 days

Sample sequence of history displays. Not shown are 12, 30, 60, and 120 days. The $[\pm]$ buttons step forward or backward through the displays.


2.2 Show Graph / Graph Tendency

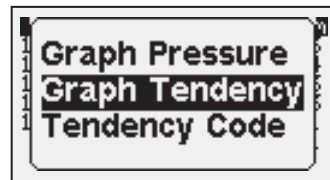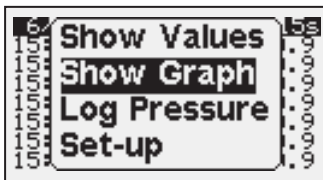

Main Menu / Show Graph / Graph Tendency

Pressure tendency is internationally defined as the change in pressure over the past 3 hours. It is usually expressed in mb (hPa). It can be used to anticipate changes in the pressure, and in some cases change in the weather as discussed in Sec. 1.1. The graph shows how the tendency is changing with time. The history range and display options are the same as in the pressure graphs (Sec. 2.1).

This graph shows how the change is changing, which can be a valuable aid to forecasting. A steady pressure drop (meaning a flat curve of tendency vs. time) can be a definite warning (Sec. 1.1), but a downward slope to this graph means the *rate of pressure drop* is increasing with time. A fast rising pressure can also portend strong wind in some weather patterns.

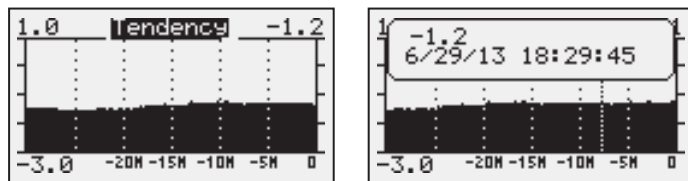


Pressure tendency graph and digital readout at the cursor.

Note that if the elevation of the instrument changes, the recorded tendency will reflect how the pressure changed over the last 3 hours, but this will not reflect actual changes in atmospheric pressure. The instrument must remain at a constant elevation for at least 3 hours for this number to be a measure of atmospheric pressure changes. A glance at the pressure graph itself usually clarifies unusual influences on the indicated pressures and tendencies.


2.3 Show Graph / Tendency Code

This is a unique function of the Duo designed to assist weather observers who must report not only the pressure tendency, but also the official Tendency Characteristic Code that describes the nature of the change, such as “Decreasing, then Steady.” Without this custom aid, the Code must be determined from the shape of the past 3-hr barograph trace using a sometimes complex set of criteria.

This characteristic is valuable for all weather watchers, not just the professionals, as it adds more understanding to the numerical value of the pressure tendency itself, as well as extending the interpretation of reports shown on weather maps.

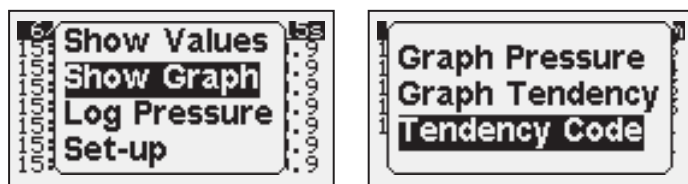

Main Menu / Show Graph / Tendency Code

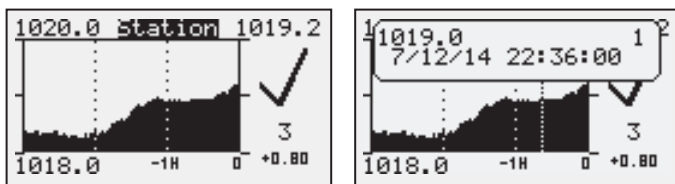


Example of the Pressure Tendency Characteristic Code display. On the left, we see that the tendency at the present time is +0.8 (pressure rose 0.8 mb over the last 3 hours), and the shape of the trace is Code 3, in this case meaning decreasing then increasing. On the right, the [-] button has been pressed to interrogate the trace at earlier times, in this case showing that at time 2236, a little over 30 min ago, the pressure was 1019.0 and the tendency was +0.70 (not shown). The Code at that time was 1 (top right), reflecting a different shape to the 3-hr period preceding that time. There is a mathematical algorithm that defines the Code for any pressure pattern. A pressure change of just 0.1 mb at either end of the 3-hr period can yield a different Code, which illustrates the great value of this automatic function.

On this Duo screen you see the 3-hour trace that defines the tendency and its characteristic code. The right side of the display shows the present pressure, the characteristic code symbol, the code value, and at the bottom is the value of the tendency itself (difference between present pressure and that of 3 hours earlier). The tendency and the code values are updated every 15 seconds as new data changes the 3-hour history.

The codes are defined in Table 2.3. Each code has an associated WMO assigned graphic symbol. These symbols are shown on weather maps that report observations in a format that is called a *station model*. As seen Table 2.4, some symbols cover more than one description of the 3-hr trace.

3. MENU — LOG PRESSURE

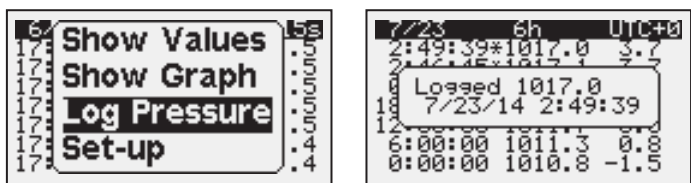

Main Menu / Log Pressure

The Log Pressure is another unique Duo function that is directed toward users who care to compare their observations with the official forecasts or for observers who must report pressures at the official times.

For many pressure applications in navigation and general weather monitoring on shore, it is convenient to compare your measured pressure with official forecasts and weather maps. These official data are collected, analyzed, and then reported world-wide at the synoptic times of 00, 06, 12, and 18 UTC.

To facilitate these comparisons, the Duo automatically records these pressures

Table 2.3. WMO Pressure Tendency Characteristic Codes

Pressure now higher than three hours ago		
<i>Description</i>	<i>Code</i>	<i>Wx Map Symbol</i>
Increasing, then decreasing	0	
Increasing, then steady	1	
Increasing, then increasing more slowly	1	
Increasing (steadily or unsteadily)	2	
Increasing, then increasing more rapidly	3	
Steady, then increasing	3	
Decreasing, then increasing	3	

Pressure the same as three hours ago		
<i>Description</i>	<i>Code</i>	<i>Wx Map Symbol</i>
Increasing, then decreasing	0	
Steady	4	
Decreasing, then increasing	5	

Pressure now lower than three hours ago		
<i>Description</i>	<i>Code</i>	<i>Wx Map Symbol</i>
Decreasing, then increasing	5	
Decreasing, then steady	6	
Decreasing, then decreasing more slowly	6	
Decreasing (steadily or unsteadily)	7	
Decreasing, then decreasing more rapidly	8	
Steady, then decreasing	8	
Increasing, then decreasing	8	

and stores them. These data are stored in UTC, so it does not matter what time zone (zone description) you have stored in the system so long as the time is set correctly to any time zone.

It may also be convenient to record the pressure at specific times to document a reading corresponding to other logged events that use the pressure value, such as logbook entries on vessels at sea or at specific times of laboratory measurements on land. This can be accomplished with the Log Now feature discussed below.


3.1 Log Pressure / Log Now

This selection records the present time and date, pressure and pressure tendency in the log. A manual entry is marked by an asterisk to distinguish it from the automatically stored values at the synoptic times. When logging a pressure manually, a window shows briefly acknowledging your entry, then the list of entries is presented. Manually entered pressures can be removed with the Clear Entries option (Sec. 3.3). Manually logged pressures are stored in UTC, even though you might be using a different time zone for the clock and barograph displays.

You can also use this feature to record accurate time to the second of any event, even if the pressure itself is not the motivation for the entry. Need for such a record comes up often in marine navigation. It could also be valuable when using the Duo for accurate elevation measurements on land.

3.2 Log Pressure / View Entries

This option shows the list of logged pressures, both automatic and manual. The $[\pm]$ buttons are used to page through the stored values—a total of 750 points (187.5 days of synoptic times) plus up to 25 manually entered pressures.

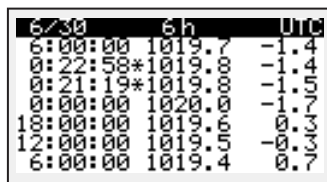

Date	Time	Pressure	Tendency
6/30	6h	U10	
6:00:00	1019.7	-1.4	
0:22:58*	1019.8	-1.4	
0:21:19*	1019.8	-1.5	
0:00:00	1020.0	-1.7	
18:00:00	1019.6	0.3	
12:00:00	1019.5	-0.3	
6:00:00	1019.4	0.7	

Log Pressure display showing 2 manually entered pressures along with 5 automatically recorded synoptic-time values. $[\pm]$ pages through the data.


3.3 Log Pressure / Clear Entries

To remove the manually added records from the Log, choose Clear Entries. A window appears then to ask for your confirmation, or you can cancel without removing these data from the Log. This Clearing removes the pressure records added manually, but leaves the synoptic time records. All pressures, however, are still stored in the Show Values / History file and in the Show Graph / Pressure plots. Up to 25 manually entered pressures are allowed.

4. MENU — SET-UP


Set-up options are ones that are not changed frequently. Settings you select here are not changed when you Reset Pressure History (Sec. 4.4), but they are returned to the default values when you select Reset To Factory Settings.

4.1 Set-up / Units, Time Zone

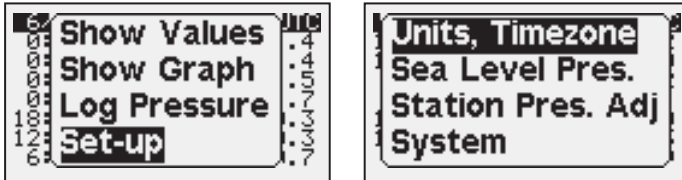

Set-up / Units, Time Zone

This menu is used to set units for pressure and elevation as well as changing the time zone and time display mode (12h or 24h system). The default values are mb (same as hPa), feet, and Time Zone 0, corresponding to UTC (same as GMT), shown using a 24h system.

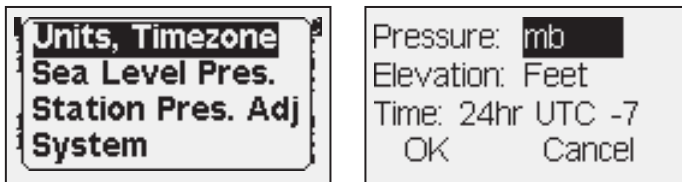


Main Set-up menu.


Use the [\pm] buttons to change the options for the highlighted section, and then press [SELECT] to move on to the next option. When done, press [SELECT] when the OK is highlighted. (The internal clock time itself can be adjusted as needed in the Set-up / System / Time display.)

The units options include: mb, inHg, mmHg, inH₂O, cmH₂O, kPa, hPa.


4.2 Set-up / Sea Level Pressure (SLP)

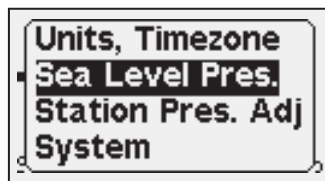

There are two ways to set the Duo to display Sea Level Pressure (SLP). You can use a known value of the SLP at the present time and location of the instrument, or you can use the known elevation of the instrument at its present location. The choice is made using the [\pm] buttons when the SLP menu first appears, which will change the mode in the highlighted area.

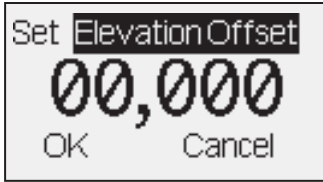

Set SLP by elevation offset or by known SLP . Use $[\pm]$ to toggle the choice, then [SELECT] to see the screens below where the data are entered.

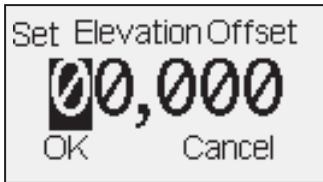

Set Sea Level Pressure by Elevation

After selecting Set by Elevation Offset, the first digit on the left of the elevation input will be highlighted and ready to change. Use the $[\pm]$ buttons to set this digit correctly, and then press Select. After all digits are entered correctly, highlight OK and press [SELECT].

You can move the highlight with [SELECT] or [EXIT]. Likewise to cancel the operation, highlight Cancel and press [SELECT]. For example, from the above screen, to enter 130 ft, you would press [SELECT] twice to get to the hundreds digit, then press the $[\pm]$ key once, then [SELECT], then $[\pm]$ key three times, then [SELECT], and again [SELECT] to enter the final 0, and one more [SELECT] to highlight OK and a final [SELECT] to record your elevation.

The proper elevation to use would be the elevation of the ground at your location plus the additional height of the instrument above ground level. This additional height above the ground is called the *Removal Correction*. This will then correct the pressure to sea level, and store that elevation.

Once this elevation has been entered, your display screens will be labeled SLP, which is a reminder that you are reading the equivalent sea level pressure. To return to Station Pressure, repeat the process and enter all zeros for the elevation offset.

This correction can be entered when the instrument is at any location, but the displayed sea level pressure would only be correct when the instrument is located at the elevation entered and stored in the unit.

The accuracy of the displayed SLP depends on the accuracy of the elevation offset that is entered. The pressure changes at a rate of 0.44 mb per 12 ft, so an error of 6 ft would cause a display error of about 0.2 mb. Accurate ground elevations can be found from a topographic map (viewer.nationalmap.gov) or from online services like Google Earth . Online sources of accurate SLP are listed in Appendix A3.

The accuracy of the SLP relative to Weather Service reports can also depend somewhat on the actual elevation. At higher elevations, the most accurate conversion

from Station Pressure to Sea Level Pressure depends on the outside air temperature as well as the elevation (See Appendix A1).

Set Sea Level Pressure by Pressure Value

The alternative way to set the instrument to SLP is to set it directly to a known value of the SLP at your location at the time you choose to set it. The procedure for entering the digits is the same as described for entering an elevation earlier in this section.

See Appendix A3 for a discussion of obtaining accurate sea level pressure for your location. Commercial weather broadcasts on radio or TV are a good starting point, but they may not be as dependable as more primary sources.

After entering a SLP here, all other pressures reported in the instrument will be marked SLP as a reminder that you have entered this offset.

To Change from SLP back to Station Pressure

When you change the display from Station Pressure to SLP by entering the correct SLP, it is equivalent to entering the corresponding elevation for the instrument. Thus when you return to the Set SLP by Elevation menu you will see the equivalent elevation has been filled in. To return the instrument to reading Station Pressure, simply change that elevation offset back to all zeros.

4.3 Set-up / Station Pressure Adj.



Station Pressure Adjust menu.

Adjusting the station pressure readout is equivalent to calibrating the Duo relative to another pressure determination at the same time and elevation that is believed to be more accurate. This is a completely different process from adjusting the instrument to read SLP, which is not related to the inherent accuracy of the pressure reading, but just an offset of the values shown.

The station pressure adjustment changes the base readout of the instrument and should only be made if you have reason to believe the internal sensors of the instrument have drifted off of their initial calibration. All barometers will drift to some extent over time, and such an adjustment is normal procedure for all instruments, aneroid and electronic. What varies among instruments is how often they might need calibration and how much offset is needed.

This adjustment should not be made unless you have convincing evidence that it is needed. In normal operation, the Duo pressure should not drift more than 1 mb per year, and there is no reason to believe they will drift that much.




Please check several sources from Appendix A3 before deciding a Station Pressure adjustment is needed.

In the Station Pressure Adjust screen, the pressure at the time you showed the menu is displayed to the maximum precision of the instrument. This pressure *is not updated by the sensors* during the time this menu is in view.

Use the [\pm] and [SELECT] to change the To Read value of the pressure to match the known SLP at your present time location. The new pressure will be displayed as you enter the correction. Input errors are not critical. Just correct any typo until it shows properly. Once this shows the pressure you wish to have, highlight OK and press [SELECT].


The offset you enter here will be removed if you Reset to factory settings (Sec. 4.4), so if you have chosen to enter one, it could be useful to record it before resetting to factory settings. This setting is not affected by Reset pressure history.

4.4 Set-up / System

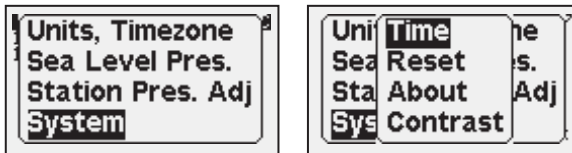

Set-up / System Menu.

Set-up / System / Time

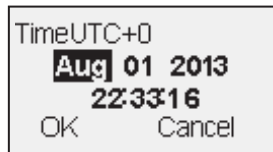

Set-up / System / Time Menu.

Use this screen to set the Duo to a precise clock time using the time zone selected in the Set-up/Units, Time Zone screen (Sec. 4.1). Step through the options using the [\pm] and [SELECT], then step to OK and press [SELECT]. The time display (12h or 24h) is selected in the Set-up / Units, Time Zone screen (Sec 4.1). The default time zone is 0, corresponding to UTC. The time zone can later be changed to best meet your needs.



Caution

Pressing OK on this screen will adjust the clock to the time that is shown. If the clock time was correct to begin with, choose Cancel to leave without changing the clock time. In other words, if the clock was right, and you just viewed this screen to see what it looks like, and then chose OK, you would lose clock accuracy, because the time shown is not changing as you watch it.

If the clock time is correct and you just want to change the time zone, then that can be done in the Set-up / Units, Time Zone screen without affecting the accuracy of the clock time.

All pressures are stored in terms of UTC, so changing the time zone will not affect the pressure records; it will just change the hour associated with each pressure that is displayed. However, the UTC used is based on the clock time and date that you set into the system with this option.


If you change the time or date after collecting data for some period of time, the data history will start from the new time entered, which would cause the time information of earlier data to be inconsistent. On new set-ups, it would be best to reset the pressure history when resetting the time by any significant amount. This does not apply to changing time zones only.

One procedure that might help achieve best accuracy when setting a new time is to set the time on this screen ahead 20 seconds or so, highlight the OK region, and then when the reference time reads 1 second before your set time, press [SELECT].

The Duo clock should maintain high accuracy over a long period of time and serve as a valuable time reference for other applications .

Set-up / System / Reset

There are two Reset options. Toggle between them with the [\pm] buttons.

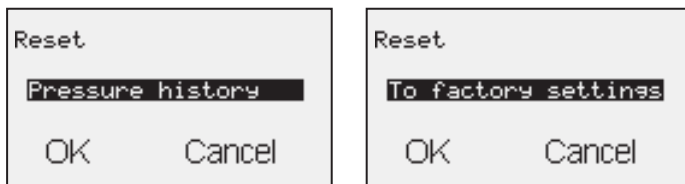

Two reset options.

Reset Pressure History

This removes all records of pressure history including the Log of synoptic pressures and those manually entered into that list and all tendency data. When you make this selection, you are presented with the option to confirm this choice or cancel. Resetting the pressure history will not change any of your set-up choices and will not change the SLP Elevation Offset nor any Station Pressure Offset that might have been entered. Pressure change arrows will then not be active until 1 hour after this selection; pressure tendency will be available after 3 hours.

Reset to Factory Settings

This Reset option returns the Duo to all of the settings and configuration it had when it was shipped from the factory. All pressure history will be erased, along with all Set-up choices that might have been entered. The time zone is set back to 0, but the time and date running in the clock are not changed.



Caution


If you have entered in a Station Pressure offset it too will be erased with this choice. You can check this first (Sec. 4.3) and make note of this status.

The only thing that is not changed in a Factory reset is the time and date presently stored in the device. A warning screen with a reminder of the above with the option to cancel is presented if this choice is selected.

5. OPERATIONS

5.1 Displays Following Power Interruption


The Duo clock has its own long term battery so timekeeping is not interrupted when power is removed from the unit. Without power pressures are not being recorded but the clock is still running. Thus the several data files of pressure records need to be updated when power is applied. This takes just seconds, and will be indicated by a progress bar on the screen. The longer the power-out period, the more data files that will update. The files stored are listed in Table 1.3. There are 750 records in each file.

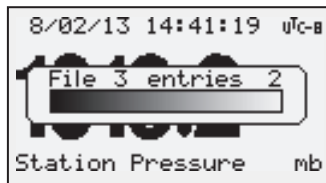

Progress bar shown during file refresh after a time without power.

The pressures stored and displayed in a graph after a power off period depend upon the period of time the power was off. If the power is off for less than 15 minutes, the pressure is recorded as constant, equal to its value at the time of power off. If the power is off for more than 15 minutes, the pressure is recorded and displayed as zero, meaning no data. Thus short interruptions of power will not notably disrupt the graphs, but longer periods will show a gap.

A graphic plot of pressures over a time range that includes a period without power more than 15 minutes will record the pressure as zero with a corresponding gap in the plot and tabular history of pressures, as shown below.

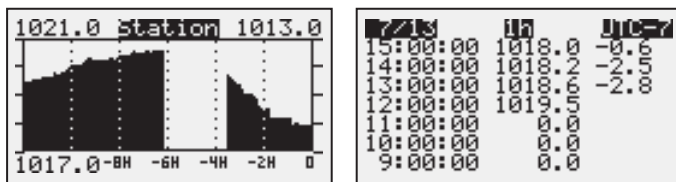

Duo displays after the power was off from 0900 to 1130 on 7/13. Tendency data shown in the far right requires 3 hours of data, so values shown will not be accurate until 3 hours of continuous operation. Note too that the elevation must remain constant during the 3-hr period for the tendency to be correct.

Power interruptions of less than 15 minutes show graph and tables at a constant pressure. The graph will be flat during that short period of time.

5.2 Connecting to the Duo from a Computer

When your Duo is connected to a computer by a USB cable you can manipulate the instrument, plot graphs, extract data, update the firmware, and other operations. You can, for example:

- Display and download stored pressure data, all or in part.
- Reset the stored data or reset to factory defaults.
- Create and access Logged entries.
- Display information on the state of the Duo.
- Read and set various parameters (units, time, timezone, etc.).
- Display the event log.
- Configure NMEA output to read pressure in other instruments and software programs.

Preparing your Computer to Read the Mintaka Duo

For latest information and downloads see www.mintakainstruments.com

Step 1. Download the appropriate version from:

Windows version Download MintakaCommander.exe

Mac version Download MintakaCommander.zip

The PC version requires Java version 1.7 or later. The latest version is available from Oracle, with links at the Mintaka support page.

Step 2. Check for USB drivers and install if needed

When you connect the Duo to a computer via a USB cable a serial port is created on the computer. You must, however, install drivers on your computer so the Duo is

properly recognized. The driver downloads and instruction on how to install them are available at the support page at www.mintakainstruments.com.

On Windows computers this port will be in the form of a COMn port, such as COM3, COM7, etc. On Mac computers this port will be in the form of a file in the file system such as: /dev/tty.usbserial-xxxxxxx. The xxxxxxxx will be the serial number associated with your Duo, shown on the front of the barometer.

Connect your Duo to the computer using a mini USB to standard USB cable. At this point we learn if you have or do not have the needed USB drivers installed on your computer.

- If you are running a PC (Win 7 or newer) that is connected to the Internet, then usually the Windows OS will recognize that you need drivers when you first connect the Duo to the PC, and it will go online, find them, and install them.
- If it does not find them, or you are running a Mac, we need to install the drivers manually, by downloading (from Mintaka support page) and running the appropriate driver installer program:


Windows_usb-serial_driver_installer.exe,

Mac_usb-serial_driver_installer.dmg.

Save the zipped file to your downloads folder, then unzip and run the installer. This takes just a minute or two, but you may have to restart the PC.

Step 3. Run MintakaCommander

With your Duo connected to the computer, return to the Downloads folder and run (double click) the appropriate version of MintakaCommander. With the drivers installed properly, it will open with a window like the one below, along with a notice that it is loading data from the Duo to the computer. This will take a few seconds for the first time, depending on how long the instrument has been running, but subsequent sync operations are much faster as it just has to add the new data. Then it will automatically display a graph of the data over the last week. This time period can then be changed as desired.

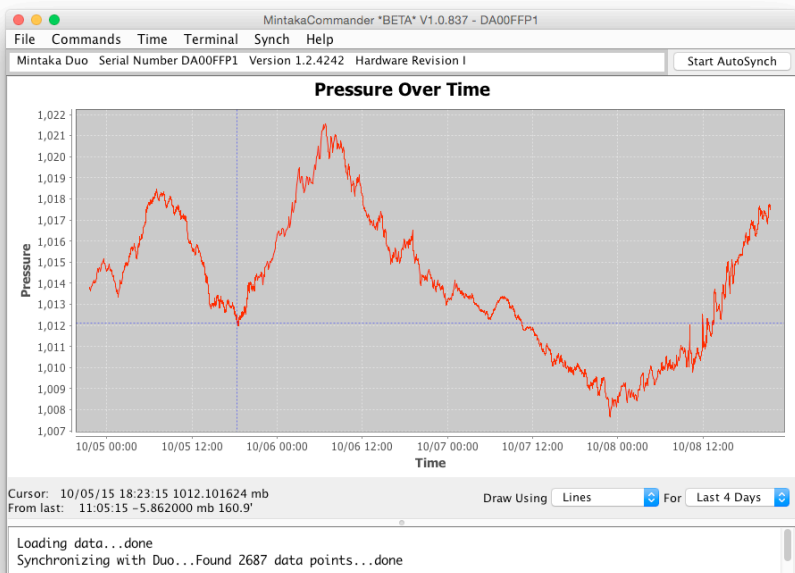

Sample screens from Mintaka Commander

```

Loading data...AutoSampling disabled because it will interfere with the operation of MintakaCommander.
plotted 2449 out of a total of 15026 points...done
Synchronizing with Duo...
Mintaka Duo Recording Barometer V 1.2 Rev I build 4242 serial number DA00FFP1, 4/10/16 12:12:24 UTC-7
Started 4/07/16 17:37:28 UTC-7, running for 2 d 18:34:56, total runtime 476 d 14:57:26
Sample files
Id  Collection Interval  Size  Samples  Last Entry UTC-7
0   0:00:15             750    750    4/10/16 12:12:15
1   0:01:30             750    750    4/10/16 12:12:00
2   0:03:00             750    750    4/10/16 12:12:00
3   0:06:00             750    750    4/10/16 12:12:00
4   0:12:00             750    750    4/10/16 12:12:00
5   0:24:00             750    750    4/10/16 12:12:00
6   0:48:00             750    750    4/10/16 12:12:00
7   2:00:00             750    750    4/10/16 11:00:00
8   6:00:00             750    750    4/10/16 11:00:00
9   12:00:00            750    640    4/10/16 5:00:00
10  1 d 0:00:00         750    319    4/09/16 17:00:00
Samples collected 7709, used 93% of file storage
Barometer State, Initialized
hourUnits 24, timeZone UTC-7, pressureUnits mb
elevationUnits Feet, barometerCorrectionType Elevation
show running avg 0, elevation 0 (0.0), station pressure offset -0.00
verbose No, samples per second 10.0, contrast 76, supply voltage 4.96
Led Off running average 12 baudrate 57600
AutoSampling is not active
Factory schema version 1, User schema version 1
Sensor Manager 5/25/15 12:53:13
Calibrated pressure no elevation correction 1008.9 filter 'Averaging'
Sensor 0 temp 82.8 filtered pressure 1009.1 raw 1009.1
Sensor 1 temp 81.5 filtered pressure 1009.1 raw 1009.1
Sensor difference temp 1.3 pressure 0.05

```


The menu options are explained in the Help menu. The information menu gives an output as shown below that tells you the complete status of the device.

Individual Commands for Specific Information

For the latest list of commands available, use the Help menu link to download the latest version of the app, and then under Commands/ Run a Command and type h for the latest list.

Command Syntax: Data enclosed in square brackets [...] are optional. Data separated by vertical bars | indicates the possible options that can be chosen. A word enclosed in angle brackets <xx> is a place holder for a value. The value is required unless included within square brackets [].

AS - auto sample

Command format: AS <frequency in seconds> [{MDA | XDR | TURBOWIN }*]

This command turns on an automated output via the USB connector in NMEA format sentences MDA and/or XDR to import pressure data into navigation software. Additionally a custom output format is available for the TurboWin program developed at KNMI, which is used by marine weather observers. The {}* notation means the options can appear in any combination. The default with no format specified gives MDA and XDR.

Output data formats are:

MDA: \$WIMDA,<sea level pressure in inches of HG>,I,<sea level pressure in Bar>,B,,,,,,,,,,,,,*<checksum>

XDR: \$WIXDR,P,<sea level pressure in Bar>,B,BARO,*<checksum>

TURBOWIN: <station pressure in mb>,<sea level pressure in mb>,<3 hour pressure tendency>,<WMO tendency characteristic code>*<checksum>

Sample commands and output:

AS 4

\$WIXDR,P,1.02265,B,BARO,*5C

\$WIMDA,30.199,I,1.02265,B,,,,,,,,,,,,,*6D

Repeated every 4 seconds.

AS 10 MDA

\$WIMDA,30.199,I,1.02265,B,,,,,,,,,,,,,*6D

Repeated every 10 seconds.

AS 15 TURBOWIN (*Before 3 hours of data collection.*)

1018.24,1018.24,,*2C

Repeated every 15 seconds.

AS 30 TURBOWIN (*After 3 hours of data collection.*)

1020.01,1019.93,1.30,3*02

Repeated every 15 seconds.

1016.82,1016.84,-0.80,8*29 (*Sample showing negative tendency.*)

CF – clear file contents

Command format: cf <fileid>

Clears the contents of the indicated file. The valid values for fileid (file id) can be seen by the 'i' command.

CL – clear log entries

Command format: cl

This command is used to clear any log entries. See Sec. 3 for a description of the log entries facility. See DL and LE commands for displaying and creating log entries.

D– dump records

Command format: d [<fileid> [<count>]]

This command prints stored pressure information. The <fileid> is an integer identifying the file of data to print. Refer to the ‘i’ command for file id’s. If <fileid> is -1 (the default) then data from all files are printed. If <count> is included, the <count> most recent samples are printed for the specified file(s). If it is not included then all pressure samples are printed. The samples are printed from oldest to most recent.

DEV – dump event log

Command format: dev

This command prints out the event log. Significant events are logged, including when the Duo is started, when the time is set, any errors that may be encountered, when the barometer is reset to factory settings, among others.

DL– dump log entries

Command format: dl

This command prints out any logged entries interspersed with the pressure samples taken at the synoptic times (0:00, 6:00, 12:00, 18:00 UTC). See Sec. 3 for a description of the log entries facility. See the CL and LE commands for clearing and creating log entries.

DM– dump machine readable data

Command format: dm <dataType>

This command is used to print information from the Duo in the JSON format. This is a format that is easily parsed. This command is useful for programs that integrate with the Duo. Valid values for <dataType> are:

h - print out the available dataTypes available.

el - print the event log in JSON format (see the DEV command).

ma - print various machine attributes.

fs - print out file status information. This is a machine readable version of the file information printed by the ‘i’ command.

Sample output of the ‘dm ma’ command is:

```
{“Title”: “MintakaDuo”, “version”: “1.0”, “CurrentTime”: “7/15/14 10:29:19”,
“Build”: 3345, “SerialNumber”: “DA00FFQG”, “Timezone”: -7, “Started”: “7/15/14
16:49:16”, “RunningFor”: “0:40:03”}
```

DP – dump pressure

Command format: dp [mm/dd/yy hh:mm:ss]

Print the pressure recorded at the specified date and time. If no date and time is provided the current pressure is printed.

DPR – dump raw pressure

Command format: dpr

Prints the pressure and temperature directly from the pressure sensors. No correction of any kind is performed and no averaging of the readings are done.

FL – invoke the firmware loader

Command format: fl

Enters the firmware loader so a new version of firmware can be loaded into the Duo's flash memory.

H – print help

Command format: h

Prints out help information on available commands.

I – info

Command format: I

Prints information on the current state of the Duo including current date and time, how long the barometer has been running, the files stored, current units.

LE – log pressure entry

Command format: le

Add the current pressure into the logged pressure entries. See Sec. 3 for a description of the log entries facility. See the DL and CL commands for displaying and clearing log entries.

RESET – reset to factory defaults

Command format: reset

Reset the Duo to factory defaults, all recorded history is deleted.

RESETH – reset pressure history

Command format: reseth

Erase all recorded pressure samples.

SA – set/read the running average count

Command format: sa [12 | 24]

Print out (if no argument is provided) or set the number of entries used for calculating the running average displayed in the graphical displays. Either 12 or 24 hourly entries (on the hour) can be specified. The default is 12.

SB – set/read baud rate

Command format: sb [1200 | 9600 | 28800 | 57600 | 115200]

Set the baud rate used for serial communication via the USB port. The default is 57600.

SC – set/read LCD contrast

Command format: sc [0-100]

Set the contrast for the LCD display. If no arguments are provided the current contrast value is printed.

SE – set/read elevation offset

Command format: se [E|P +/-xxxx.x]

Sets the elevation offset. As with the graphical user interface the elevation offset can be either set by a pressure value (if P is provided) or an elevation value (if E is provided). If no arguments are provided the current offset is printed. The default is an elevation offset of 0. Example: 'se E 4500' sets the elevation offset to be 4500 feet.

SN – view serial number

Command format: sn

Print out the Duo's serial number.

SO – set/read the station pressure offset

Command format: so [\pm xxxx.x]

Sets the station pressure offset. If no arguments are provided the current station pressure offset is printed. The default is a station pressure offset of 0.0.

SS – set/read sensors

Command format: ss [0|1 0|1]

Controls the Duo's two sensors. 0 disables a sensor and 1 enables it. If no arguments are provided then the current status is printed. The default is for both sensors to be enabled. Example: "ss 0 1" turns off sensor 0 and turns on sensor 1

ST – set/read time

Command format: st [mm/dd/yy hh:mm:ss]

Sets the current time (in the currently selected timezone). If no arguments are provided the current time is printed out.

SU – set/read units

Command format: su [{12|24} {mb|hPa|inHg|mmHg|inH2O|cmH2O|kPa} {feet|inches}]

Sets the units used by the Duo, with these arguments:

Clock format. 12 or 24 for a 12h or 24h clock time (default is 24h)

Pressure units. mb, hPa, inHG, mmHg, inH2O, cmH2O, kPa (default is mb)

Elevation units. feet or meters (default is feet).

If no arguments are provided, SU prints the current units in use.

SZ – set/read timezone

Command format: sz [\pm (0 - 12)]

Set the current timezone. Values from -12 to +12 are legal (default is 0 for UTC). If no arguments are provided the current timezone is printed.

Other means of connecting to a computer

The support page at mintakainstruments.com also includes detailed instructions on how to connect the Duo directly using a terminal application of your choice. The example given uses the PC and Mac versions of CoolTerm.

5.3 Maintenance

The Mintaka Duo barometer requires no regular maintenance. The case can be cleaned with a damp cloth and mild soap.

5.4 Limited Warranty

The Mintaka Duo is warranted to be free of defects in materials and construction for a period of 1 year from date of initial purchase. Liability is limited to repair or replacement of defective item. Product registration can be done at mintakainstruments.com.

5.5 FCC and CE Compliance

This product complies with pertinent FCC and European CE requirements.

5.6 Specifications Summary

Dimensions: 3.8" x 3.6" x 1.3" (97 mm x 91 mm x 33 mm)

Power:

12V DC

5V via mini USB

DC barrel connector: 5.5 mm OD; 2.1 mm ID; center pin positive

Operating pressure range 500 to 1080 mb

Operating elevation 18,000 ft (5,500 m) above sea level to
1,800 ft (550 m) below sea level.

Accuracy <1 mb over full pressure range at -20C to +50C

Long term drift <1.0 mb/year, at -20C to +50C

Appendix

A1. Air Temperature Corrections to SLP

A2. Barometer Corrections for Elevation and Temperature

A3. Sources of Accurate Sea Level Pressure

A4. Menu Map

A1. Air Temperature Corrections to SLP.

For an improved conversion from station pressure to SLP, the internal correction made by the Duo should be corrected for average outside air temperature by the amount in this table.

Table A1. Air Temperature Corrections to SLP								
			-40°F	-22°F	-4°F	14°F	23°F	32°F
	Meters	Feet	-40°C	-30°C	-20°C	-10°C	-5°C	0°C
1	0	0	0.0	0.0	0.0	0.0	0.0	0.0
2	10	33	0.3	0.2	0.2	0.1	0.1	0.1
3	20	66	0.6	0.4	0.3	0.2	0.2	0.1
4	30	98	0.8	0.7	0.5	0.3	0.3	0.2
5	40	131	1.1	0.9	0.7	0.4	0.3	0.3
6	50	164	1.4	1.1	0.8	0.6	0.4	0.3
7	60	197	1.7	1.3	1.0	0.7	0.5	0.4
9	70	230	1.9	1.5	1.1	0.8	0.6	0.4
10	80	262	2.2	1.7	1.3	0.9	0.7	0.5
11	90	295	2.5	1.9	1.4	1.0	0.8	0.6
12	100	328	2.8	2.2	1.6	1.1	0.8	0.6
13	110	361	3.0	2.4	1.8	1.2	0.9	0.7
14	120	394	3.3	2.6	1.9	1.3	1.0	0.7
15	130	427	3.6	2.8	2.1	1.4	1.1	0.8
16	140	459	3.8	3.0	2.2	1.5	1.2	0.8
17	160	525	4.3	3.4	2.5	1.7	1.3	1.0
18	180	591	4.9	3.8	2.8	1.9	1.5	1.1
19	200	656	5.4	4.2	3.1	2.1	1.6	1.2
20	220	722	5.9	4.6	3.4	2.3	1.8	1.3
21	240	787	6.4	5.0	3.7	2.5	1.9	1.4
22	260	853	6.9	5.4	4.0	2.7	2.0	1.5
23	280	919	7.4	5.7	4.2	2.8	2.2	1.5
24	300	984	7.8	6.1	4.5	3.0	2.3	1.6
25	350	1148	9.0	7.0	5.2	3.4	2.6	1.9
26	400	1312	10.2	7.9	5.8	3.9	2.9	2.0
27	450	1476	11.3	8.8	6.4	4.3	3.2	2.2
28	500	1640	12.4	9.6	7.0	4.6	3.5	2.4
29	600	1968	14.5	11.2	8.2	5.3	4.0	2.7
30	700	2297	16.5	12.7	9.2	5.9	4.4	2.9
31	800	2625	18.4	14.1	10.1	6.5	4.7	3.1
32	1000	3281	21.8	16.6	11.8	7.4	5.3	3.2
33	1200	3937	24.7	18.7	13.2	8.0	5.6	3.2
32	1800	5905	31.4	23.3	15.7	8.6	5.2	2.0

For example, if located at an elevation 200m and the average air temperature over the past 12h was 30C (86F), then the SLP read on the dial should be reduced by 1.3 mb. As the average air temperature changes, that correction would change with it for a fixed elevation of 200m.

Table A1. Continued								
41°F	50°F	59°F	68°F	86°F	104°F	T±		
5°C	10°C	15°C	20°C	30°C	40°C	°C	°F	
0.0	0.0	0.0	0.0	0.0	0.0	15	59	1
0.0	0.0	0.0	0.0	-0.1	-0.1	15	59	2
0.1	0.0	0.0	0.0	-0.1	-0.2	15	59	3
0.1	0.1	0.0	-0.1	-0.2	-0.3	15	59	4
0.2	0.1	0.0	-0.1	-0.2	-0.4	15	59	5
0.2	0.1	0.0	-0.1	-0.3	-0.5	15	58	6
0.2	0.1	0.0	-0.1	-0.4	-0.6	15	58	7
0.3	0.1	0.0	-0.2	-0.4	-0.7	15	58	9
0.3	0.1	0.0	-0.2	-0.5	-0.8	14	58	10
0.4	0.2	0.0	-0.2	-0.6	-0.9	14	58	11
0.4	0.2	0.0	-0.2	-0.6	-1.0	14	58	12
0.4	0.2	0.0	-0.3	-0.7	-1.1	14	58	13
0.5	0.2	0.0	-0.3	-0.7	-1.2	14	58	14
0.5	0.2	-0.1	-0.3	-0.8	-1.3	14	57	15
0.5	0.2	-0.1	-0.3	-0.9	-1.4	14	57	16
0.6	0.3	-0.1	-0.4	-1.0	-1.6	14	57	17
0.7	0.3	-0.1	-0.5	-1.1	-1.8	14	57	18
0.7	0.3	-0.1	-0.5	-1.3	-2.0	14	57	19
0.8	0.3	-0.1	-0.6	-1.4	-2.2	14	56	20
0.8	0.3	-0.2	-0.6	-1.5	-2.4	13	56	21
0.9	0.3	-0.2	-0.7	-1.7	-2.6	13	56	22
0.9	0.3	-0.2	-0.8	-1.8	-2.8	13	56	23
1.0	0.4	-0.3	-0.8	-2.0	-3.0	13	55	24
1.1	0.4	-0.3	-1.0	-2.3	-3.5	13	55	25
1.2	0.4	-0.4	-1.2	-2.7	-4.1	12	54	26
1.3	0.3	-0.6	-1.4	-3.1	-4.6	12	54	27
1.3	0.3	-0.7	-1.6	-3.4	-5.2	12	53	28
1.4	0.2	-1.0	-2.1	-4.2	-6.3	11	52	29
1.5	0.1	-1.3	-2.6	-5.1	-7.4	10	51	30
1.4	-0.1	-1.6	-3.1	-5.9	-8.5	10	50	31
1.3	-0.6	-2.5	-4.3	-7.7	-10.9	9	47	32
0.9	-1.3	-3.5	-5.6	-9.5	-13.3	7	45	33
-1.2	-4.3	-7.2	-10.1	-15.6	-20.8	3	38	32

Table A2. Barometer Corrections for Elevation and Temperature

	-4 F	14 F	32 F	50 F	68 F	86 F	
FT	-20 C	-10 C	0 C	10 C	20 C	30 C	M
5	0.2	0.2	0.2	0.2	0.2	0.2	1.5
10	0.4	0.4	0.4	0.4	0.4	0.4	3.0
15	0.6	0.6	0.6	0.6	0.5	0.5	4.6
20	0.8	0.8	0.8	0.7	0.7	0.7	6.1
25	1.0	1.0	1.0	0.9	0.9	0.9	7.8
30	1.2	1.2	1.2	1.1	1.1	1.0	9.1
35	1.5	1.4	1.4	1.3	1.3	1.2	10.7
40	1.7	1.6	1.5	1.5	1.4	1.4	12.2
45	1.9	1.8	1.7	1.7	1.6	1.6	13.7
50	2.1	2.0	1.9	1.9	1.8	1.7	15.2
55	2.3	2.2	2.1	2.0	2.0	1.9	16.8
60	2.5	2.4	2.3	2.2	2.2	2.1	18.3
65	2.7	2.6	2.5	2.4	2.3	2.3	19.8
70	2.9	2.8	2.7	2.6	2.5	2.4	21.3
75	3.1	2.9	2.8	2.7	2.6	2.5	22.9
80	3.3	3.2	3.1	3.0	2.9	2.8	24.4
85	3.5	3.4	3.3	3.2	3.1	3.0	25.9
90	3.8	3.6	3.5	3.4	3.2	3.1	27.4
95	4.0	3.8	3.7	3.5	3.4	3.3	29.0
100	4.2	4.0	3.9	3.7	3.6	3.5	30.5
105	4.4	4.2	4.1	3.9	3.8	3.7	32.0
110	4.6	4.4	4.2	4.1	4.0	3.8	33.5
115	4.8	4.6	4.4	4.3	4.1	4.0	35.1
120	5.0	4.8	4.6	4.5	4.3	4.2	36.6
125	5.2	5.0	4.8	4.7	4.5	4.3	38.2

A2. Ship's Barometer Corrections

Table A2 includes the barometer corrections needed to convert a station pressure reading at barometer elevation to the equivalent sea level pressure, taking into account instrument elevation and outside air temperature. The data cover typical values found on ships at sea.




Thus if the elevation is 110 ft and the outside air temperature is 86° F, the correction to get from station pressure to sea level pressure would be + 3.8 mb. In this case, of this 3.8 mb only 0.2 mb is due to the air temperature, which caused a lower than normal correction. However, if the air temperature had been a chilly -4° F, the correction at 110 ft would be 4.6 mb, of which 0.6 mb was due to the air temperature, and this caused a higher than normal correction.

A3. Sources of Accurate Sea Level Pressure

1. Weather maps at <http://www.opc.ncep.noaa.gov>
2. Metar reports at <https://www.aviationweather.gov/adds/metars>
3. Buoys and Lighthouses at <http://www.ndbc.noaa.gov>








MENU 1






Page 10

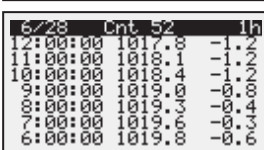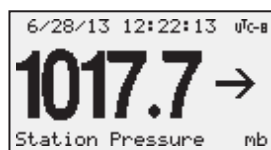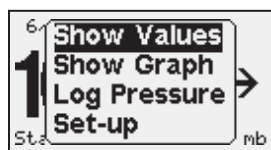








MENU 2

Page 16

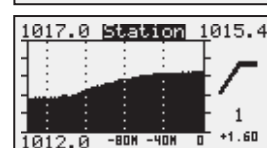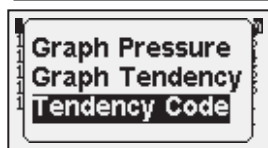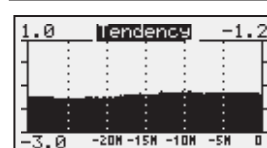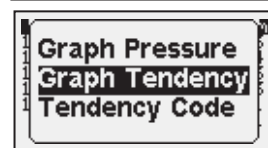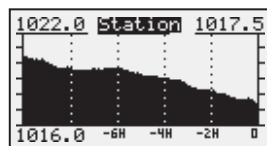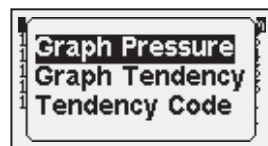
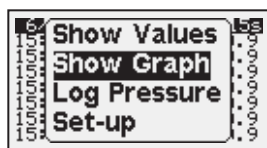


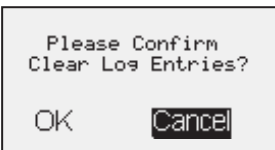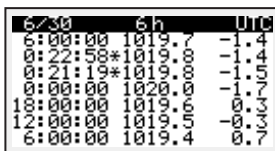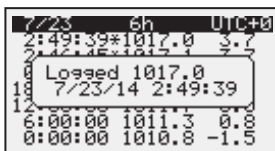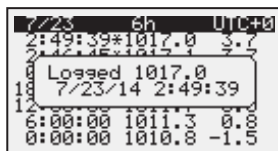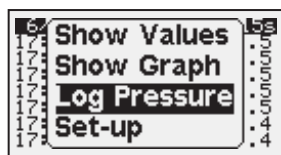

Page 24

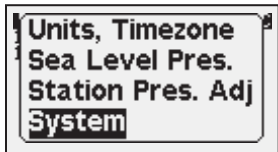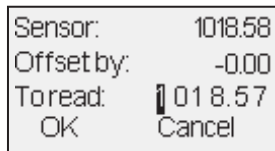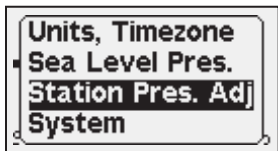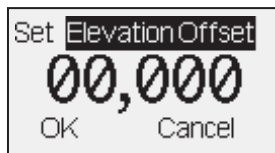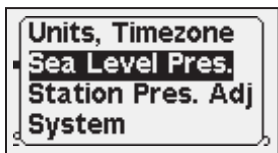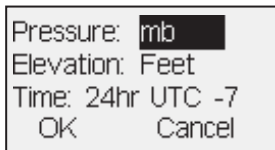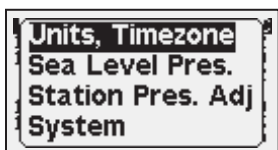

About

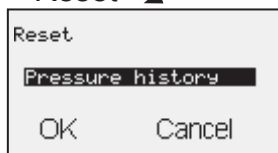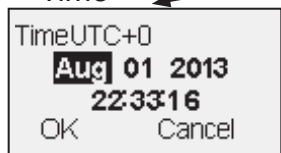



Mintaka Instruments, LLC
www.mintakainstruments.com

Distributed worldwide by

Weems & Plath®

Manufacturer of Fine Nautical & Weather Instruments

www.weems-plath.com

800-638-0428